



Contents




Turntable



Turntable power cable




iPad



3D Sensor & cable



iPad charger +
Sensor charger

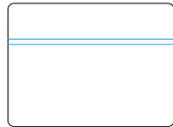

Tablet Sleeve



Checklist

Guidelines & Support

Please consult detailed instructions in our online installation guide at bodygee.com/academy/installation

Any questions or need help?

Contact us via support@bodygee.com

For FAQ and Troubleshooting


Please visit support.bodygee.com



Setup

Find a suitable place to set up the turntable. The scanning area needs a flat and hard surface of 1.5m x 1.5m (5' x 5'). Avoid soft surfaces like carpets which can affect the integrated scale outputs.


Artificial uniform lighting from ceiling works best. Avoid sunlight. Make sure power is available nearby and WiFi connection is adequately strong.




1. Carefully unpack the turntable and place it at desired location, the power inlet facing the wall.

Do not tilt or roll the turntable and always lift it with an assisting person!

2. Once placed, remove rubber protection.

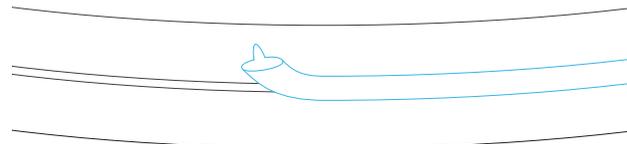


3. Plug in cable first to turntable, then to power. The LED will quickly flash up.

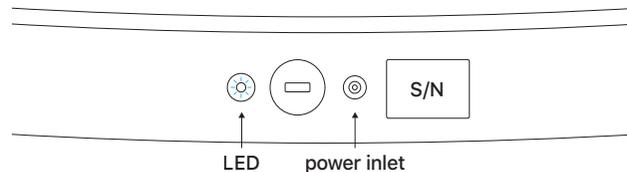

Be careful not to damage the plug when connected. Make sure nobody stumbles over cable. Never move the turntable with the cable plugged in.

Configuration

1. Turn on iPad and make sure Wi-Fi and Bluetooth is turned on.



2. Open **iOS Settings** and change the Apple ID password with the credentials you've received separately. The iCloud email address is set up on your iPad already.



Settings → Apple ID (top left) → Password & Security

3. Open **Coach App** (app.bodygee.com) and sign in with the *Bodygee Coach Account credentials* you've received separately. Please continue to your profile in the top right corner and change your password.



app.bodygee.com → My Profile → Change Password

4. Open **Scan App** and sign in with the same *Bodygee Coach Account credentials*. To pair with your turntable make sure it is connected to power, go to *Profile » Turntable* and press *Add turntable*.



Profile → Turntable → Add turntable

5. You are now all set up. Next, learn how to get started with scanning.

Please start now Bodygee Academy for your first elearning course: bodygee.com/academy/basics



GUIDE HELP	support.bodygee.com support@bodygee.com
SCAN APP	scan.bodygee.com
COACH APP	app.bodygee.com
CLIENT APP	client.bodygee.com